



# 92-910, 912

## 04-08 Nissan Titan King, Crew Cab

(866) 476-6276 / (866)IRONCROSS  
[www.ironcrossautomotive.com](http://www.ironcrossautomotive.com)

519 W. Dewey  
Sapulpa, OK 74066  
IRON CROSS AUTOMOTIVE INC. 2008

# ENDEAVOUR INSTALLATION SHEET


QTY.	PARTS LIST	QTY.	
3	Driver Side Brackets	12	5/16 Lock Washers
3	Passenger Side Brackets	6	5/16 Nylok Nuts
6	Bracket Clamps	6	5/16 Carriage Bolts
6	8mm Bolts	18	5/16 Flat Washers
6	8mm Nuts		

## MAINTENANCE AND CARE

Use only mild soap for regular cleaning. For heavy build up, a solution of ammonia and water can be used. Never use an abrasive material, i.e. steel wool, for cleaning purposes. Use terry cloth towels wiping in the direction of the tube at all times.

- STEP 1** Remove contents from box and check for damage parts. Verify all parts are present, making sure to read and understand instructions before beginning.
- STEP 2** Locate factory running board mounts on bottom side of the cab on the inside of the body panel. Locate factory stud and lower rubber plug. Remove plug and expose factory threaded 8mm hole.
- STEP 3** Hang bracket over factory stud, making sure that the lower hole lines up with the factory insert. The bracket should be hanging perpendicular to the ground. There are driver and passenger brackets that are not interchangeable.
- STEP 4** Install bracket on factory stud with 8mm nut, lock washer, and flat washer. Install 8mm hex head bolt, lock washer and flat washer through lower hole on bracket into factory threaded hole. Hardware should be hand-tightened to allow for final adjustment. **FIG 1**
- STEP 5** Repeat for passenger side.
- STEP 6 Mounting board to vehicle.**
- 1) Place clamp brackets on main bracket, turn 90 degrees to the main brackets. Place carriage bolt through top of clamp bracket through main bracket, placing flat washer and nylock on bottom side. **Fig 2a**
  - 2) Place running board on main brackets, making sure that opening and the bottom of the board goes over the clamp brackets.
  - 3) Rotate clamp brackets above main brackets, making sure that both edges of the running board are in between the clamp bracket and the main bracket. Make sure running board is pushed all the way in towards vehicle on main brackets. **Fig 2b**
  - 4) Adjust board to be centered under the cab of the vehicle and tighten the clamp brackets to the main brackets. Make sure all remaining hardware is tightened and test the running boards for attachments.

## MOUNTING BOARD TO BRACKET

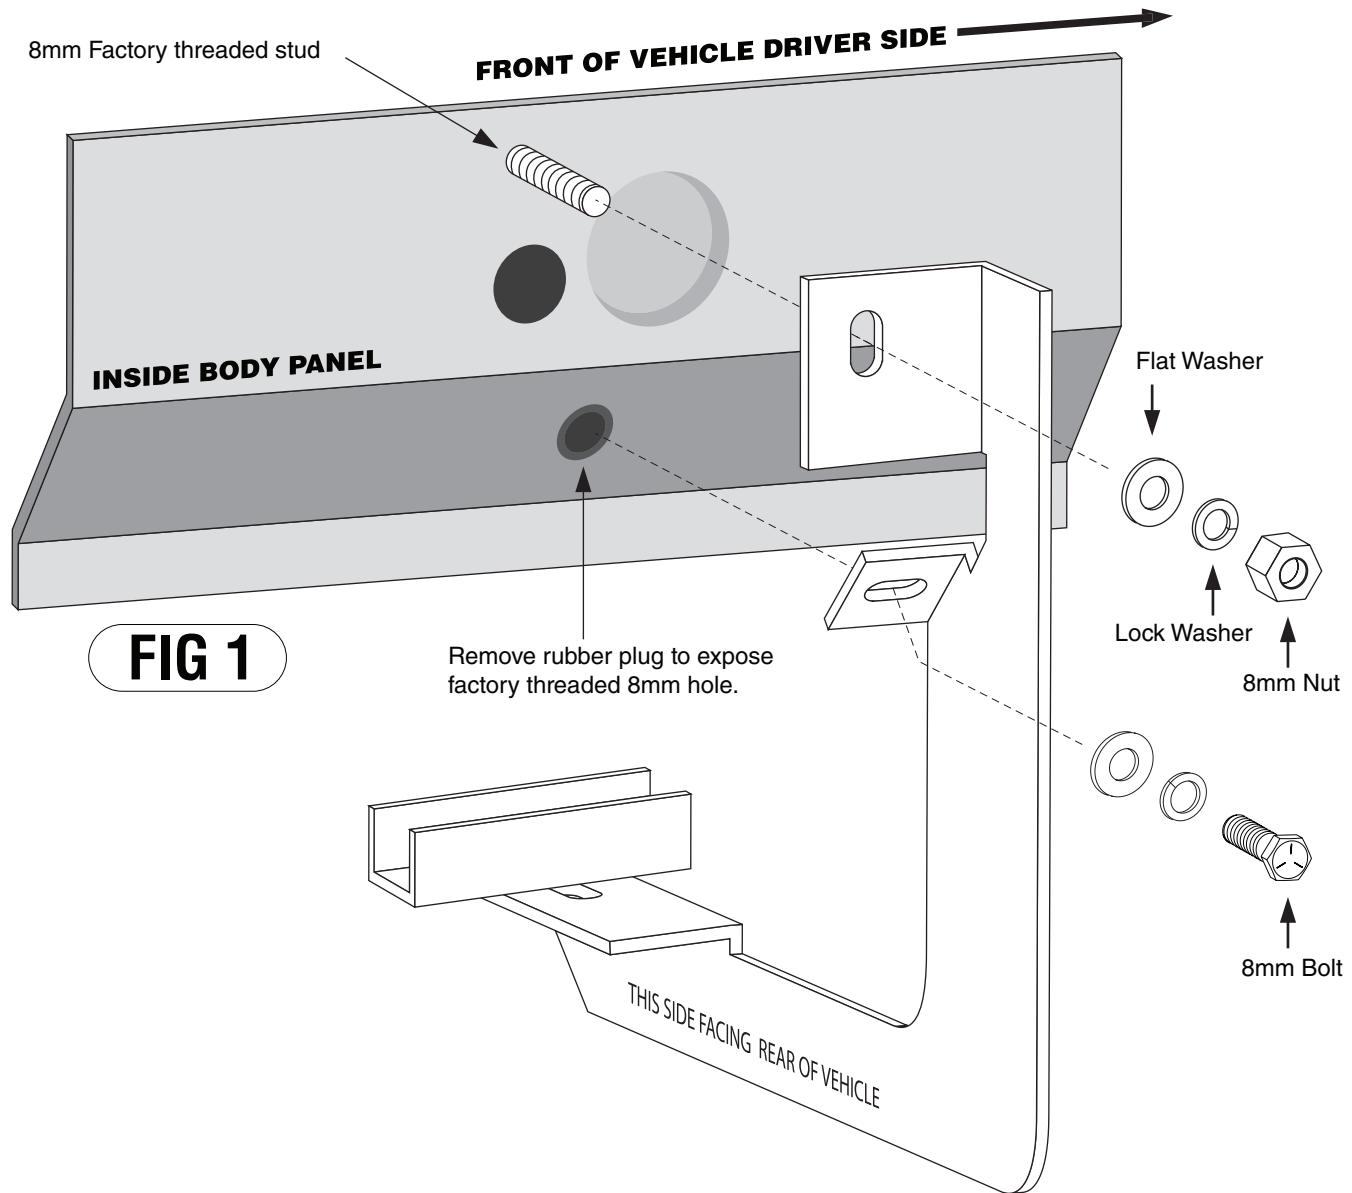

**FIG 2a**

