

92-718



2007-10 Toyota Reg Cab, Double Cab, CrewMax

(866) 476-6276 / (866)IRONCROSS
www.ironcrossautomotive.com
519 W. Dewey
Sapulpa, OK 74066
IRON CROSS AUTOMOTIVE INC. 2007

ENDEAVOUR INSTALLATION SHEET

QTY.	PARTS LIST	QTY.	PARTS LIST
2	Front Brackets (#1)	16	8mm Hex Bolts
2	Middle Brackets (#2)	8	5/16 Nylok Nuts
4	Rear Brackets(#3-4)	8	5/16 Carriage Bolts
8	Bracket Clamps 	24	Flat Washers
		16	8mm Lock Washers

MAINTENANCE AND CARE

Only use mild soap for regular cleaning. For heavy build up, a solution of ammonia and water can be used. Never use an abrasive material, i.e. steel wool, for cleaning purposes. Use terry cloth towels wiping in the direction of the tube at all times.

STEP 1 Remove contents from box and check for damage parts. Verify all parts are present, making sure to read and understand instructions before beginning.

STEP 2 Front Bracket (#1) Installation

(A) The front brackets are longer than the other brackets and can be mounted on either side of the vehicle.

(B) Align the front bracket holes to the 8mm threaded factory sidewall holes and install 8mm flat washer, lock washer and hex bolt.


(C) Hand tighten so bracket can slide vertically and allow for final adjustments.

STEP 3 Middle Bracket (#2) Installation


Bracket (#2) can be mounted on either side of the vehicle and should be mounted behind (#1). Use described hardware above to install bracket (#2)

STEP 4 Rear Brackets (#3-4) Installation

Brackets (#3-4) can be mounted on either side of the vehicle and should be mounted behind (#2). Use described hardware above to install brackets (#3-4)

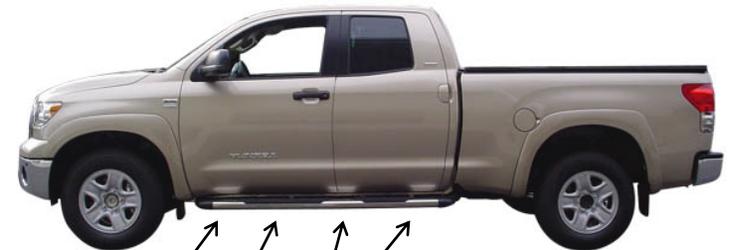

** Brackets are individually numbered with stamp on the clip end.

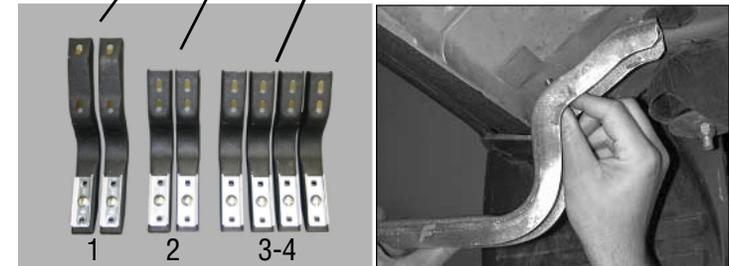

Driver and Passenger brackets shown in above picture / 4 brackets per side.

****Regular Cab requires only one pair of "3-4" brackets per side.***

STEP 5 Mounting board to vehicle.

- 1) Place clamp brackets on main bracket, turn 90 degrees to the main brackets. Place carriage bolt through top of clamp bracket through main bracket, placing flat washer and nylock on bottom side. **Fig 1a**
- 2) Place running board on main brackets, making sure that opening and the bottom of the board goes over the clamp brackets.
- 3) Rotate clamp brackets above main brackets, making sure that both edges of the running board are in between the clamp bracket and the main bracket. Make sure running board is pushed all the way in towards vehicle on main brackets. **Fig 1b**
- 4) Adjust board to be centered under the cab of the vehicle and tighten the clamp brackets to the main brackets. Make sure all remaining hardware is tightened and test the running boards for attachments.



2007 Toyota Tundra Double Cab

MOUNTING BOARD TO BRACKET

